

User's manual



SUP'AIR - VLD 34 rue Adrastée Parc Altaïs 74650 Annecy - Chavanod FRANCE

45°54.024'N / 06°04.725'E

www.supair.com



Thank you for choosing to fly our EONA to paraglide with. We are delighted to have you on-board to share our passion for paragliding.

SUP'AIR has been designing producing and selling accessories for free flying activities since 1984. By choosing a SUP'AIR product you benefit from almost thirty years of expertise, innovation and customer care. We pride ourselves for our work ethics and customer care.

We hope you will find this user's manual comprehensive, explicit and hopefully enjoyable as well. We advise you to read it carefully.

You will find the latest information and updates on this product on our website : www.supair.com. If however you have any further questions, do not hesitate to ask one of our dealers.

Naturally the entire SUP'AIR team remains at your disposal at info@supair.com

We wish you many safe and enjoyable flying hours and happy landings.

Team SUP'AIR



Contents

Introduction	4
Technical specifications	5
Equipment overview	6
Connecting the glider	7
Pre-flight preparation	9
Take-off	10
Flight characteristics	11
End of the flight	12
Specific practices	12
Fast descents	13
Flight incidents	15
Line layout	16
Materials	17
Measurement table	18
Certificates	22
Maintenance	25
Mandatory checks	26
Warranty	26
Disclaimer	26
Pilot equipment	26
Complementary equipment / Accessories	27



Introduction

Welcome to the world of free flying : a shared world of passion.

The EONA wing is a glider meeting all the students and instructors requirements. It was designed for both intensive schooling and private use while providing great inflight comfort all along the pilot's progression curve. The well though out design and choice of materials were guided by the same quality and longevity objectives.

The EONA glider is EN EN 926 -1 : 2006 & 926 - 2 : 2013 Classe A. Certified.

Meaning that this paragliding wing has a maximal passive safety margin built-in in addition to being forgiving and collapse resistant in turbulent aerology.

It is naturally adapted to all flying levels including beginner pilots.

It can be used with most harnesses found on the market today. For better inflight comfort and sensations we will advise you to choose the SUP'AIR progression harness models.

After reading this manual we advise you to inflate & check your wing on a training hill first.

N.B. : The following three icons will help you to read this manual.








Danger !!



Technical data

Glider EONA	XS	S	Μ	L
Cell number	41	41	41	41
Flat surface area (m²)	20	23	26.5	29.45
Span (m)	9.8	10.51	11.28	11.89
Chord (m)	2.48	2.66	2.86	3.01
Flat Aspect Ratio	4.8	4.8	4.8	4.8
Projected surface area (m ²)	16.98	19.53	22.50	25.00
Projected span (m)	7.71	8.27	8.88	9.36
Projected aspect ratio	3.5	3.5	3.5	3.5
Glider weight (kg)	4.5	4.8	5.1	5.5
In-flight weight range (kg)	50-73	65 - 85	80 -105	100 - 130
Trim speed (km/h)		3	38	
Max. speed (km/h)		Z	19	
Certification	EN A	EN A	EN A	EN A
Riser number.	3	3	3	3
Trimmer	no	no	no	no

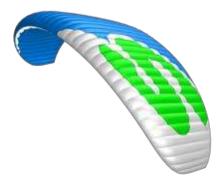

Colour code WINTER

Colour code SPRING

Colour code SUMMER

SUP'AIR _EONA Page 5







Opening the wing

Choose a flat or lightly angled training hill without obstacles or wind. Open your wing and arrange it in a crescent shape.

Check the fabric and the lines for any sign of wear or damage. Check for the links connecting the lines to the risers to be fully closed. Identify, separate and arrange the

A.B.C, risers as well as the brake lines neatly. Knots or tangles can not be present.

Choosing an adapted harness.

The EONA glider was certified EN A with a EN1651 & LTF certified harness and hence can be flown with most harnesses models found on the market today. We wil advise you to choose a EN1651 and or LTF certified harness with a built-in dorsal protection system.

Connecting the wing to the harness.

Without twisting the risers, connect them to the harness connection loops using the selflocking carabiners.

Check for the risers to be properly positioned and untwisted. The "A" risers must be located at the front and facing the flight direction(see schematic).

Lastly, check for the main self-locking carabiners to be fully closed and locked in place.

Harness chest strap spacing


It is advised to adjust the harness's chest strap width based on your wing size : 38 cm for an FONA size XS 40 cm for an EONA size S 42 cm for an EONA size M 44 cm for an FONA size

Installing the accelerator

Install the accelerator according to your harness manufacturer's recommendations.

Connect it to the wing using the split hooks.

Once the accelerator/speedbar is connected, adjust its length according to your measurements. For correct use, there must not be any tension at the split-hook level when the accelerator/speedbar line is relaxed.

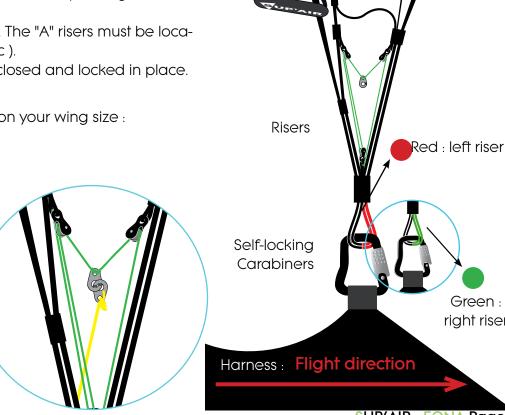

Connecting the glider

SUP'AIR EONA Page 7

Green :

right riser



Brake line length

fisherman's knot

Connecting the glider

Brake line lengths are set at the factory to allow optimal glider control. However, if they do not suit you they can be adjusted to your liking.


We will advise using a fisherman's knot and to keep your length changes to a minimum (approx 5cm maximum).



If you modify the original default setting, have it inspected and approved by a professional before flying..




The default factory maximum brake line length is : 72 cm

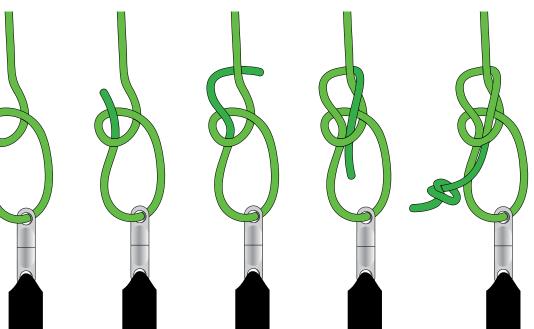



Be certain to adjust and leave a small amount of line slack to keep steering toggle play, prevent wing profile deformation and hinder the accelerator functionality.

During acceleration, the glider's trailing edge must not be deformed.

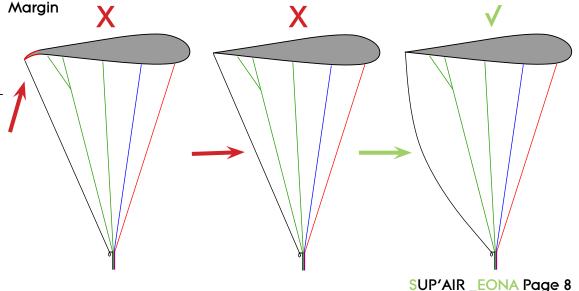

PRE-FLIGHT PREPARATION

The EONA glider was designed to help new pilots with their progression. To discover your new wing, we will advise you to conduct your first small flights in calm conditions on a school training hill or a familiar site you are used to flying with your own harness.

Unfold the glider and place it on its upper surface in an arc.

Separate the A,B,C risers and the brakes, be certain for the risers and lines not to have any twists or knots or be hooked to a branch, stone etc...

Caution !



It vital to conduct a thorough pre-flight check and have the harness properly connected to the glider prior each takeoff.

Run through the following procedure prior each takeoff:

- harness or carabiners do not show signs of wear and tear.
- the reserve parachute container is correctly closed and that the handle is in the correct position
- your personal settings have not been changed
- The wing is properly connected to the risers with all links securely tightened and locked in place.
- The wing is properly connected to the harness without any riser twist.
- You are securely connected to the harness with the leg and chest strap buckles closed, self-locking carabiners locked.
- Your are wearing your helmet and it is properly fastened.



The design team has strived to produce a wing with optimum inflating abilities in all flyable conditions. Whether it be in light or high winds you will enjoy its docile behavior while launching. However before the first flight, practice ground-handling to become familiar with your new glider. It is possible to inflate in a front- or reversed-launch method.

Forward launch

To inflate the glider grab the upper ends of the "A" risers with your hands and progressively move foreward guiding the glider upward. Once the wing is flying overhead, apply brakes as necessary, look up and perform a visual check before accelerating to take off.

Reverse launch

If the wind speed is sustained and permits it, we will advise you to use a reversed inflation method more adapted to conduct a better visual check. Face the wing and grab the "A" risers. With a light pull and adapted rearward walking motion, inflate your wing. Once the glider is stable overhead, turn around, look up once more to check that all is ok. before running down the slope and takeoff. Note: it is not necessary to use the "A" risers to inflate the wing.



Caution!

Before take-off, ensure for the airspace to be clear in front, around and above you with weather conditions matching your flying skill level..



FLIGHT CARACTERISTICS

Here are a few tips to take advantage of your EONA wing's performance in flight:

« Hands up » speed or trim speed

Flying « hands up » will provide the best glide ratio in nil wind.

Using the accelerator/speedbar.

According to the EN A norm, the EONA glider was designed to be stable throughout its speed range. Accelerated, the wing becomes more sensitive to turbulence. If you sense a glider internal pressure decrease while pushing on the accelerator; lessen the speedbar tension to bring it back to its neutral default setting while slightly applying a small amount of brake by pulling the hand toggles and prevent a possible leading edge frontal collapse. The accelerator/speedbar length travel is: 13 cm.

Piloting without the toggles/brakes.

If for whatever reason, the toogles/brakes are no longer available, you will need to pilot your wing using the harness and "C" risers instead. Beware not to overcontrol the glider to limit the risk of experiencing a possible stall. To land, let your wing glide for as long as possible before applying a full braking motion. Braking using the "C" risers is not as efficient as using the toggles and could bring a more energetic landing than normal.

Turns

To make your glider turn efficiently, and only after checking that the space below you is clear and safe to land on, weight shift toward the inside of the turn and progressively pull your brake/toggle on the same side until the desired turning angle is reached. The turning speed and radius can also be adjusted by using the other brake/toggle controlling the upper half side of the wing. If flying at low speed, begin your turn by raising your hand on the upper and external side of the turn to prevent a possible flat-turn or twisted turn on the vertical axis.

End of the flight

Landing

Be certain to always have enough altitude for a safe landing before approaching the chosen Landing Zone (PTU, PTS, etc...). Never make aggressive maneuvers close to the ground. Always land into the wind (upwind), standing up and ready to run to a stop if necessary. Make your landing approach with maximum air speed if possible depending on the weather conditions of the moment, then progressively brake to slow the glider to a final touchdown. Beware not to brake too much, too soon and too rapidly to prevent a possible stall and hard landing.

In case of a landing in sustained higher wind speeds, you will need to quickly turnaround, face the wing, move forward while braking down symmetrically. You can equally pull the "C" risers down to deflate the glider and bring it to the ground.

Folding

Fold each side of your wing in an accordion-like shape. Stack-up the leading edge reinforcements on top of one another. Bring one side of the glider over the other while keeping the leading edge reinforcements flat. Roll the wing on itself, starting from the leading edge toward the trailing edge. During the entire packing procedure, do not bend the leading edge's reinforcements.

Specific usage

Towing

The EONA wing can be towed up. Fly only with certified gear operated by qualified personal and only after taking a towing clinic. The towing force must correspond to the weight of the equipment, and the pulling sequence can only start when the wing is fully inflated and stable over the pilot's head.

Aerobatics

The EONA wing was not designed to enter aerobatic maneuvers. We highly discourage its use for this type of flying.

Tandem



The EONA wing was not designed for tandem flying.


FAST DESCENTS

The following techniques should only be used in emergencies and require prior training to be safely conducted. Appropriate analysis and anticipation of the conditions will often prevent the need to use fast descent techniques. We will advise you to practice in still air and preferably above water.

Big Ears

Pulling "ears" increases the glider sink rate. We do not recommend the use of big ears close to the ground

In order to pull "ears", grab the specific riser (outer "A" riser) while keeping the toggles in hands and lowering them until the win tips collapse. It is preferable to collapse one side after the other and not simultaneously in order to prevent an eventual frontal collapse. Once the "Ears" are folded and stabilized, we will recommend using the accelerator/speedbar to regain your initial air speed.

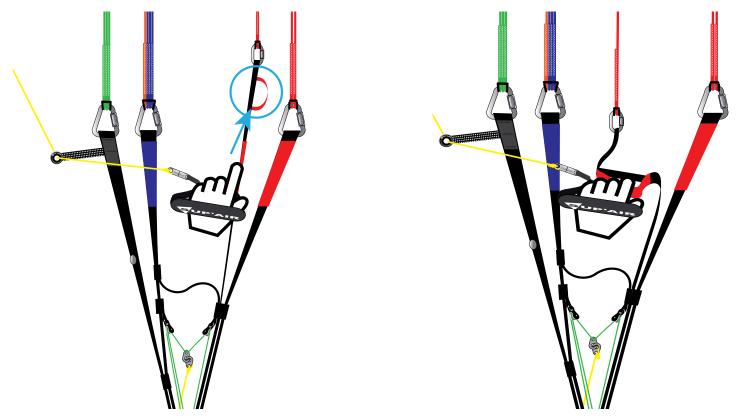

To reopen the "Ears", bring the accelerator/speedbar back to its neutral default setting, then let go the risers symmetrically. You can pump the brake/toggles on either side of the wing to facilitate its reopening sequence.

B-line stall

This technique is usually physically demanding and will provoke a parachutal wing configuration and hence wing control will be diminished.

Loosing altitude using the "B" risers is done by grabbing the risers at the metal links level and applying a symmetrical downward vertical pull until the wing's profile is deformed. This maneuver can be maintained to increase the wing's sink rate. To regain a normal flying configuration, bring your hands up progressively to the "A" risers red markers, then let go the "B" risers altogether. The wing will experience a moderate surge forward which will need to be instantly neutralized and controlled.

360° spiral dives

To begin a spiral dive make sure the air space is clear around and below you, then lean toward the chosen side while gradually applying brake/toggle pressure on that side. The wing will gradually accelerate before entering a full spiral dive. You may use the outer/upper toggle to manage your sink rate.

In order to exit the rotation, get back to a neutral (centered) position in the harness and gradually release the inside brake. You need to keep the glider in a turn as it decelerates in order to limit the surge while exiting the spiral. If your exit is too radical the glider will surge aggressively and experience a substantial dive to be immediately controlled.. Gradually slowing down the rotation with the outside and upper brake will allow you to exit the spiral in a controlled manner.



To prevent stressing we do not recommend combining spiral dives with "Ears".



Conforming to the EN A, the EONA glider does not show any tendency to stay in a locked spiral configuration and will return by itself to a normal flying angle in less than two full rotations when the toggles/brakes are brought back up.



DANGER This manœuvre places a lot of stress on the glider. The high speed and "G" force might be disorientating and, in extreme cases, cause you a temporary loss of consciousness. Practice this maneuver gradually with ample space around and below you.



Flight incidents

Asymmetric collapses

Any paraglider may occasionally collapse due to turbulence or a piloting error. In the event of an asymmetric collapse your priority must be to stay clear of the terrain and regain level flight. It is done by via of weight shifting toward the open side and if necessary, support the action by applying an appropriate amount of brake on the same side.

If the collapsed side does not automatically reopen then pump the collapse side deeply and repetitively to repressurize the deflated wing tip. Repeat if necessary until full reinflation is successful. In the event of a "cravat" (where the wing tip is snagged between the lines) you may use the "ears" technique described above by pulling on the tangled line in order to release the wingtip.

Front collapses

During a front collapse according to the certification standard the glider is designed to reopen on its own. make sure you do not brake to facilitate the return to a normal flight.

Parachutal stall

Even though this configuration only rarely occurs, you may find yourself in a situation called "parachutal stall " where the glider descends vertically with no forward motion. If it happens, release the brakes/toggles fully and trims symmetrically. You might also need to push forward on the "A" risers. Make sure you regained a normal flight configuration before proceeding with brake/toggle usage again.

Stall


This technique is not recommended as it requires intense physical impute. It is not a safe descent technique.

Spin / asymetric stall

A spin will only occur because of a piloting error. If so, release the brake fully on the stalled side and be certain to keep the glider in check during the ensuing dive and reopening sequence.



LINE LAYOUT DIAGRAM

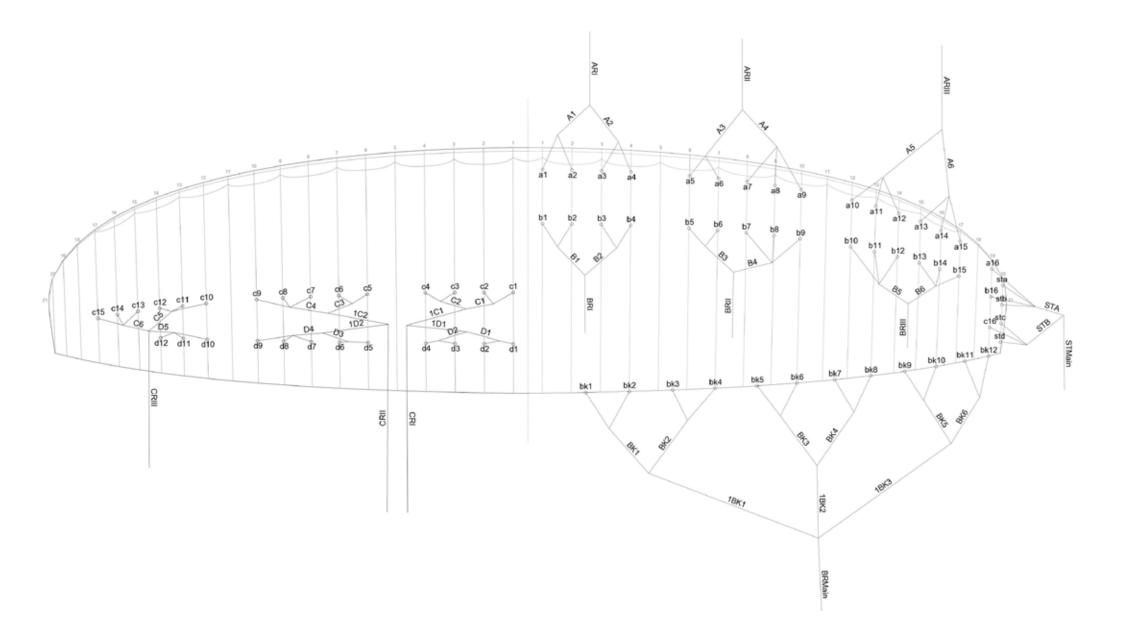



Materials

Fabrics	Producer	Reference
Outer surface	Porcher Sport	Skytex 38 Universal – 9017E25
Inner Surface	Porcher Sport	Skytex 38 Universal – 9017E25
Supported ribs	Dominico tex	Dominico 30D hard finish
Compression straps and D ribs	Dominico tex	Dominico 30D hard finish
Unsupported ribs	Dominico tex	Dominico 30D hard finish
Rib reinforcements	Porcher Sport	SR 170

Main lines	Producer	Reference
Top cascade	Liros	DSL 70
Upper middle cascade	Liros	PPSL 160 / PPSL 120
Lower cascade	Edelrid	A7343-280

Stabilo lines	Producer	Reference
Top cascade	Liros	DSL 70
Middle cascade	Liros	DSL 70
Lower cascade	Edelrid	A6843-160

Brake lines	Producer	Reference
Top cascade	Liros	DSL 70
Upper middle cascade	Liros	PPSL 120
Lower middle cascade	Liros	PPSL 160
Lower cascade	Edelrid	785ox - 240
Mailons	Peguet	MAILLON RAPIDE DELTA INOX 3.5MM

Maintenance sheet.

EONA glider

Size XS

Line Check Maintenance Sheet

	_	Α	В	С	D	Frein
Centre	1	5667	5590	5655	5771	6400
	2	5618	5542	5605	5719	6218
	3	5610	5533	5594	5707	6097
	4	5640	5562	5627	5741	6084
	5	5636	5547	5591	5702	5943
	6	5594	5509	5552	5657	5874
	7	5588	5510	5556	5651	5855
	8	5578	5504	5553	5647	5892
	9	5629	5558	5614	5711	5832
	10	5477	5501	5533	5606	5799
	11	5402	5436	5475	5543	5871
	12	5368	5412	5460	5521	5861
	13	5314	5369	5426		
	14	5268	5331	5397		
	15	5262	5326	5400		
Stabilizers	16	5084	5055	5133		_
Wingtip	17	4971	4996	5036	5130]

Tolerance: 10 mm.

Riser length : 460mm Tolerance: +/- 5mm

Measurement table

EONA glider

Size S

Line Check Maintenance Sheet

		Α	В	С	D	Frein
Centre	1	6084	6003	6074	6197	6779
	2	6033	5952	6021	6141	6601
	3	6025	5944	6009	6130	6488
	4	6057	5976	6045	6167	6484
	5	6061	5966	6016	6135	6347
	6	6018	5926	5976	6087	6274
	7	6011	5928	5980	6082	6254
	8	6001	5923	5978	6078	6295
	9	6055	5981	6043	6147	6219
	10	5896	5917	5954	6034	6168
	11	5816	5849	5893	5966	6225
	12	5780	5823	5877	5944	6206
	13	5722	5777	5841		
	14	5673	5737	5809		
	15	5666	5730	5812		
Stabilizers	16	5457	5425	5508		_
Wingtip	17	5335	5362	5405	5505]

Tolerance: 10 mm.

Riser length : 460mm Tolérence +/- 5mm

Measurement table

EONA glider

Size M

Line Check Maintenance Sheet

		Α	В	С	D	Frein
Centre	1	6535	6445	6530	6672	7347
	2	6481	6391	6475	6613	7157
	3	6472	6381	6466	6603	7035
	4	6508	6417	6504	6644	7032
	5	6529	6434	6506	6646	6889
	6	6483	6393	6463	6595	6812
	7	6479	6394	6467	6586	6792
	8	6469	6389	6465	6582	6836
	9	6528	6452	6535	6657	6752
	10	6364	6399	6462	6550	6697
	11	6279	6326	6396	6478	6759
	12	6241	6298	6379	6459	6739
	13	6180	6246	6338		
	14	6127	6203	6305		
	15	6120	6197	6308		
Stabilizers	16	6049	5976	6059		_
Wingtip	17	5902	5913	5944	6037]

Tolerance: 10 mm.

Riser length : 490mm Tolérence +/- 5mm

Measurement table

EONA glider

Size L

Line Check Maintenance Sheet

		Α	В	С	D	Frein
Centre	1	6911	6819	6897	7035	7656
	2	6855	6763	6839	6973	7457
[3	6845	6754	6828	6961	7330
	4	6883	6792	6870	7005	7327
ſ	5	6893	6786	6847	6976	7180
	6	6845	6743	6802	6924	7099
	7	6841	6742	6803	6926	7079
	8	6830	6737	6802	6923	7125
	9	6893	6804	6876	7001	7037
Ī	10	6725	6740	6785	6877	6980
	11	6636	6663	6716	6801	7034
	12	6596	6634	6698	6777	7012
[13	6530	6579	6656		
	14	6474	6534	6621		
	15	6467	6527	6624		
Stabilizers	16	6239	6200	6296		
Wingtip	17	6099	6128	6173	6288	

Tolerance: 10 mm.

Riser length : 520mm Tolérence +/- 5mm

PAIR EONA alider user's manual



EN 926 -1 : 2006 & 926 - 2 : 2013 Classe A. N° PG-0889.2014

CERTIFICATES

Air Turquoise 5/

Rte du Pré-au-Comte B | CH-1844 Villeneuve





PG_0926.2015 In accordance with EN standards 926-2:2013 & 926-1:2006: 24.03.2015 Date of issue (DMY): Manufacturer: Supair - VLD Eona XS Serial number: ENA-06-XS-101914

Configuration during flight tests

Paraglider					Acce	ssor	ies								
Maximum weight in flight (kg)		73			Rang	e of s	speed	l syst	em (o	cm)				10	
Minimum weight in flight (kg)		50			Spee	d ran	ge us	sing b	rakes	s (km	/h)			12	
Glider's weight (kg)		4.2			Rang	e of t	rimm	ers (d	cm)					0	
Number of risers		3			Total	spee	d ran	ge w	ith ac	cess	ories	(km/l	n)	24	
Projected area (m2)		16.9	8												
Harness used for testing (max weight)				Inspe	ection	ns (w	hiche	ever h	appe	ns fir	st)			
Harness type		ABS	;		evey	12 m	onthe	or e	very	100 fl	ying	hours	5		
Harness brand		Flug	Isau		Warn	ing! E	Before	e use	refer	to us	ser's	manu	al		
Harness model		XX-I	ite		Perso glider					g pre	sente	d the	9		
Harness to risers distance (cm)		40													
Distance between risers (cm)		40													
1 2 3 4 5 6 7 8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23

PAIR EONA alider user's manual



Rte du Pré-au-Comte B | CH-1644 Viteneuve tel. -4121 965 65 65 | mobile -41 79 202 52 90

paragliding by air lunguoise.

into@oara-test.com

CERTIFICATES

Rte du Pré-au-Comte 8 | CH-1844 Villeneuve tel. +4121 965 65 65 1 mobile +41 79 202 52 30

Air Turouoise 5A

info@oara-test.com



PG_0913.2015

17.03.2015

In accordance with EN standards 926-2:2013 & 926-1:2006:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	85	Range of speed system (cm)	12
Minimum weight in flight (kg)	65	Speed range using brakes (km/h)	12
Glider's weight (kg)	4.8	Range of trimmers (cm)	0
Number of risers	3	Total speed range with accessories (km/h)	22
Projected area (m2)	19.53		
Harness used for testing (max weight)		Inspections (whichever happens first)	
Harness type	ABS	evey 12 months or every 100 flying hours	
Harness brand	Supair	Warning! Before use refer to user's manual	
Harness model	Access M	Person or company having presented the glider for testing: None	
Harness to risers distance (cm)	41		
Distance between risers (cm)	44		

1 2 3 4 5 6 7 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 8 9

AA AAAAAA AA |A||A||A||A||A||A||A| A A

SUP AIR EONA alider user's manual

oara-test.com

Certification EN 926 -1 : 2006 & 926 - 2 : 2013 Classe A. N° PG-0889.2014 LTF 91/09

CERTIFICATES

Certificate of conformity

SiN contification

(123)(1195

Air Turquoise SA, nach gründliche Flug und Struktur Teste, zertifiziert dass der hierunter erwähnter Gleitschirm die LTF 91/09 Norm sachlich entspricht, in Kategorie A

Air Turquoise SA, having thoroughly tested in flight and structure the Paraglider mentioned hereunder, certifies its material compliance with all criteria defined by the LTF 91/09 norm, category A

Air Turquoise SA, ayant rigoureusement testé en vol et en structure le parapente nommé ci-dessous, certifie par la présente sa conformité matérielle avec la norme LTF 91/09 en catégorie A

Manufacturer: SUP'AIR - VLD

Model/Type: Eona M

S/N: ENA-05-M-071514

paragliding by air buyucher

Delivery date: 14.11.2014


Villeneuve, le 14/11/2014

para-test.com

Alain Zoller Administrateur, directeur Air Turquoise SA

> Air Turquoise SA Rhe du Pré-au-Comte 6 | CH-1944 Vileneuve teL 40 21 965 65 65 | mobile 41 79 202 65 790 into@naa-test.com

www.para-tes

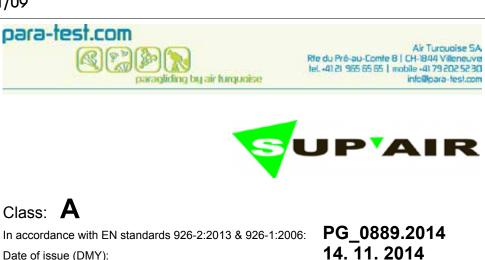

Date of issue (DMY): Manufacturer: **Supair - VLD** Model: **Eona M**

Serial number:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	105	Range of speed system (cm)	12
Minimum weight in flight (kg)	80	Speed range using brakes (km/h)	14
Glider's weight (kg)	5.1	Range of trimmers (cm)	0
Number of risers	3	Total speed range with accessories (km/h)	24
Projected area (m2)	22.5		
Harness used for testing (max weight)		Inspections (whichever happens first)	
Harness type	ABS	evey 12 months or every 100 flying hours	
Harness brand	Supair	Warning! Before use refer to user's manual	
Harness model	Evo CX M	Person or company having presented the glider for testing: JC Sciera	
Harness to risers distance (cm)	41		
Distance between risers (cm)	44		

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

SUP AIR EONA alider user's manual

oara-test.com

Certification EN 926 -1 : 2006 & 926 - 2 : 2013 Classe A. N° PG-0889.2014 LTF 91/09

CERTIFICATES

PG 0914.2015

17.03.2015

Certificate of conformity

Air Turquoise SA, nach gründliche Flug und Struktur Teste, zertifiziert dass der hierunter erwähnter Gleitschirm die LTF 91/09 Norm sachlich entspricht, in Kategorie A

Air Turquoise SA, having thoroughly tested in flight and structure the Paraglider mentioned hereunder, certifies its material compliance with all criteria defined by the LTF 91/09 norm, category A

Air Turquoise SA, ayant rigoureusement testé en vol et en structure le parapente nommé ci-dessous, certifie par la présente sa conformité matérielle avec la norme LTF 91/09 en catégorie A

Manufacturer: SUP'AIR - VLD

Model/Type: Eona L

S/N: ENA 08L 101914

paragliding by air largooise

Delivery date: 17.03.2015

Villeneuve, le 17/03/2015

Alain Zoller Administrateur, directeur Air Turquoise SA

para-test.com

Air Turquoise SA Rhe du Pré-au-Comte B | CH-1944 Villeneuve tel. -41 21 955 55 55 1 mobile -41 79 202 52 30 info@para-test.com

HN certification

narea libers

OTHER



Class: A

In accordance with EN standards 926-2:2013 & 926-1:2006:

Date of issue (DMY): Manufacturer: **Supair - VLD**

Model: Eona L

1 2 3 4 5 6 7 8

Serial number:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	130	Range of speed system (cm)	11.5
Minimum weight in flight (kg)	100	Speed range using brakes (km/h)	12
Glider's weight (kg)	5.5	Range of trimmers (cm)	0
Number of risers	3	Total speed range with accessories (km/h)	22
Projected area (m2)	25		
Harness used for testing (max weight)		Inspections (whichever happens first)	
Harness type	ABS	evey 12 months or every 100 flying hours	
Harness brand	Niviuk	Warning! Before use refer to user's manual	
Harness model	Hamak XL	Person or company having presented the glider for testing: None	
Harness to risers distance (cm)	44		
Distance between risers (cm)	48		

9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24



Washing and glider maintenance.

Maintenance

It is a good idea to wash your glider from time to time. We recommend using sponge or soft hair brush and a non aggressive watersoluble cleaning agent (such as baby soap).

We will recommend wing inspections to be conducted at regular intervals:

Repair eventual small fabric damages (holes smaller than a 1Euro coin or 1 US. 25 cents coin) with the small rounded sticky ripstop pieces included in your repair kit.

Empty out the cells/caissons from sand, pebbles, grass, leaves, etc...

Storage and transport.

When not using your glider store it inside your paragliding rucksack in a dry cool and clean place protected from UV exposure. If your harness is wet please dry thoroughly before storing. If your glider is wet or humid, dry it thoroughly first. Keep all metal parts away from corrosive elements.

Product longevity.

Irrespective of pre-flight checks, your glider must be serviced regularly and in accordance with its maintenance schedule. We will recommend for the wing to be inspected every 2 years or every one hundred (100) hours, and more specifically check the followings :

• Lines (no excessive wear no breakages or folds) maillons and carabiners



- Materials selected for the EONA ensure the best compromise for lightness and longevity. However in certain conditions such as exposure to UV or abrasion or exposure to chemical products the glider must be submitted to a thorough inspection by a qualified facility. Your safety depends on it!
- Carabiners must be replaced every five (5) years by identically rated and certified models recommended by the manufacturer (SUPAIR).



Repair



In spite of using the best quality materials, your glider may be subjected to wear and tear (Gigi, subjected et non subject) and hence will need to be regularly inspected at a qualified repair center.

SUP'AIR also offers the possibility for its products to be repaired beyond the end of the warranty period. Please contact us either by telephone or by E-mail sav@supair.com in order to receive a quote.

All our materials are selected for their technical and environmentally friendly characteristics. None of the components found in our products will harm the environment. Most of them are recyclable.

If your EONA's life span is over, you can separate all metallic and plastic parts from the cloth and dispose of the rest according to your country's recycling guide lines and requirements. Please contact your local recycling center for more information..

Mandatory controls



Your glider must be checked every 2 years or every 100 flight hours by a qualified operator.

We advise you to take this opportunity to have your reserve repacked.

Warranty

SUP'AIR takes the greatest care in the design and production of its product line hence offers a 3 years limited warranty from the purchase date against any manufacturing defect or design issues occurring during normal use. Any damage or degradation resulting from incorrect or abusive use, abnormal exposure to aggressive factors including but not limited to; high temperature intense sun exposure high humidity etc. will invalidate this warranty.

Disclaimer



Paragliding is an activity requiring, skills, specific knowledge and sound judgement. Be safe by learning in certified schools, subscribe and obtain an adequate insurance policy as well as a flying license while always making sure your flying skills are up to the task in various weather flying conditions. SUP'AIR cannot be held responsible for your paragliding decisions or activities.



This SUP'AIR product was designed for solo use only. Any other activity such as tandem paragliding, skydiving or BASE jumping is absolutely forbidden.

Pilot's gear

It is essential to wear a helmet, suitable shoes with good ankle support and adapted clothing. Carrying a reserve emergency parachute corresponding to your weight and properly connected to the harness is also highly recommended.







SUPAIR-VLD Parc Altaïs 34 rue Adrastée 74650 Chavanod, Annecy FRANCE

> info@supair.com +33(0)4 50 45 75 29

45°54.024'N / 06°04.725'E